

THE BROKEN,
EXHAUSTED STAINED
GLASS WINDOW ...




THERE'S SO MUCH DAMAGE ...




... SEE VIDEO IN FIRST RESTORATION
LETTER (APRIL 8TH, 2023)

TO PREPARE FOR AN ORDERLY
RESTORATION, GET SOME STRONG
BROWN PAPER.

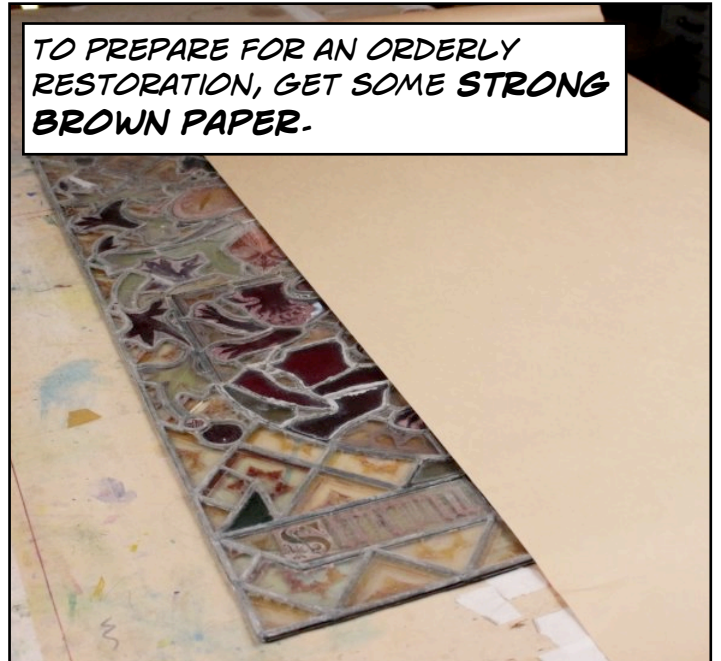

COVER WINDOW WITH
PAPER AND ...

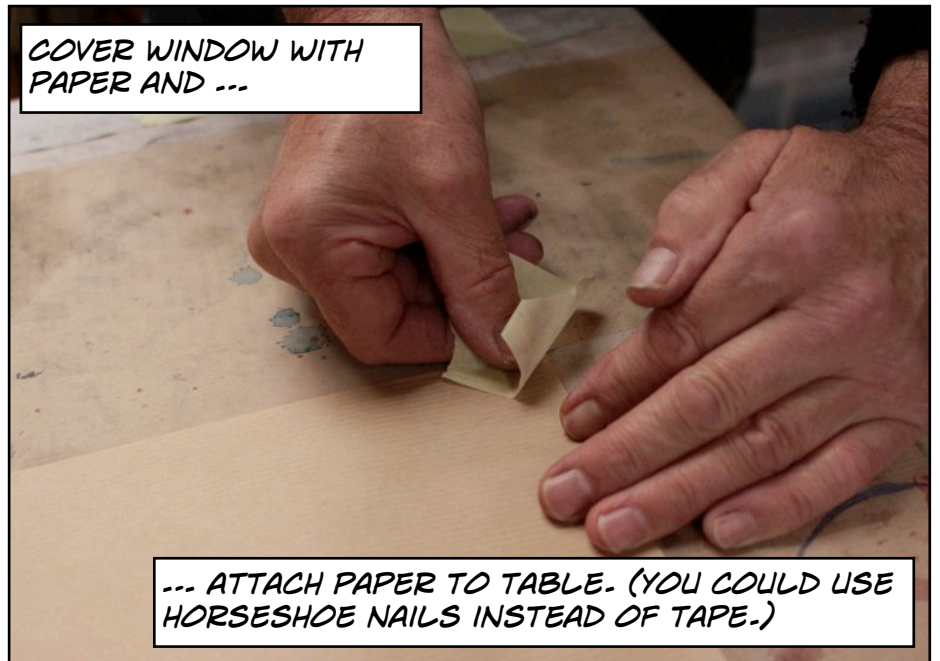


... ATTACH PAPER TO TABLE. (YOU COULD USE
HORSESHOE NAILS INSTEAD OF TAPE.)


RUB WITH A CLOTH ...



... TO MAKE THE LEAD STAND OUT.

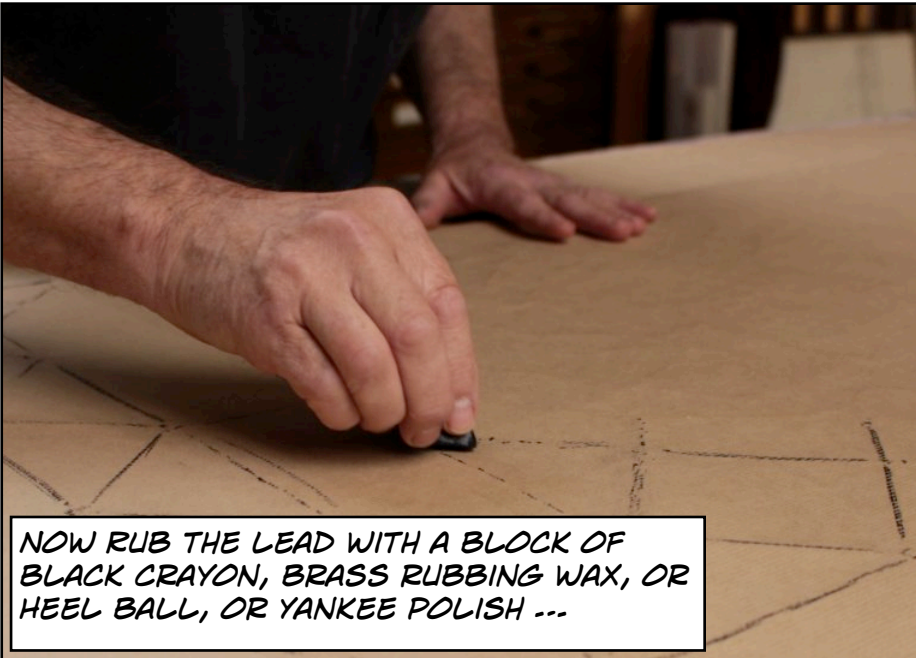

NOW RUB THE LEAD WITH A BLOCK OF BLACK CRAYON, BRASS RUBBING WAX, OR HEEL BALL, OR YANKEE POLISH ...

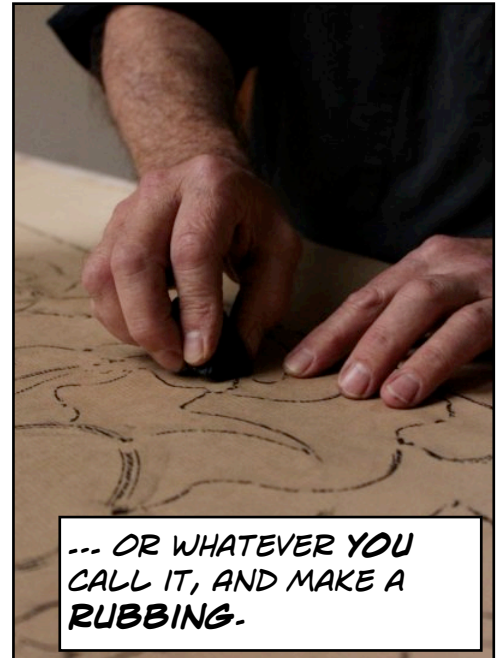


... OR WHATEVER YOU CALL IT, AND MAKE A RUBBING.



CAREFULLY RUB THE BLACK CRAYON (OR WHATEVER YOU CALL IT) ACROSS ALL THE LEAD WITHIN THE WINDOW.

IF THERE'S MORE THAN ONE WINDOW, IT'S A GOOD IDEA TO LABEL THE RUBBING.

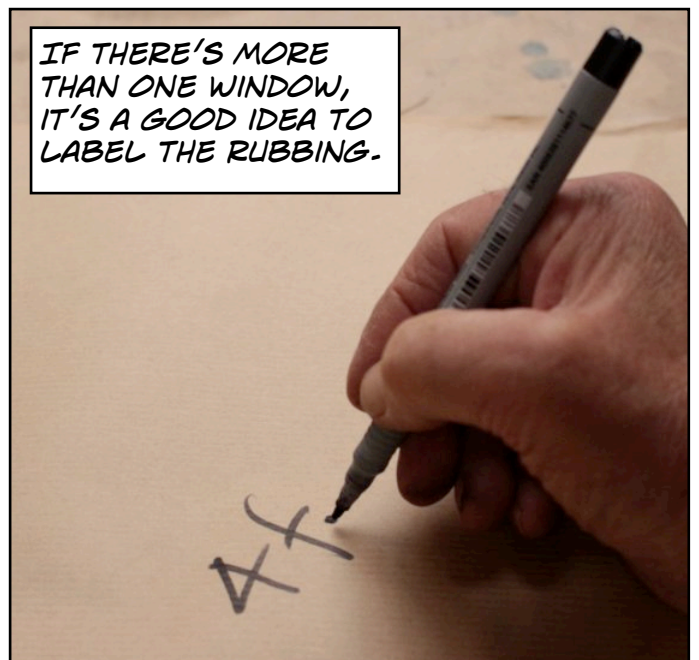



THE WINDOW CAN GO AWAY FOR NOW.



LAY THE RUBBING ON THE TABLE.





FASTEN IT TO THE TABLE.




ATTACH TRACING PAPER ON TOP.



TRIM THE TRACING PAPER TO SIZE.

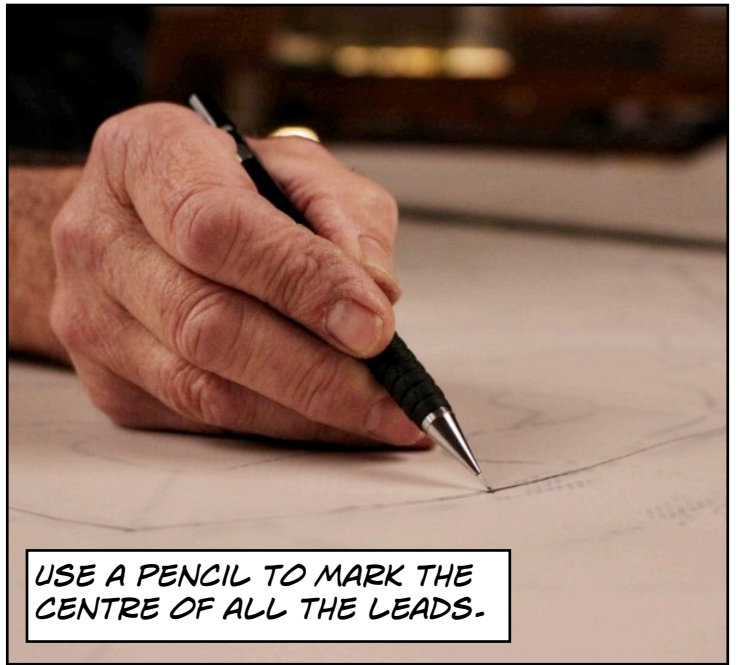
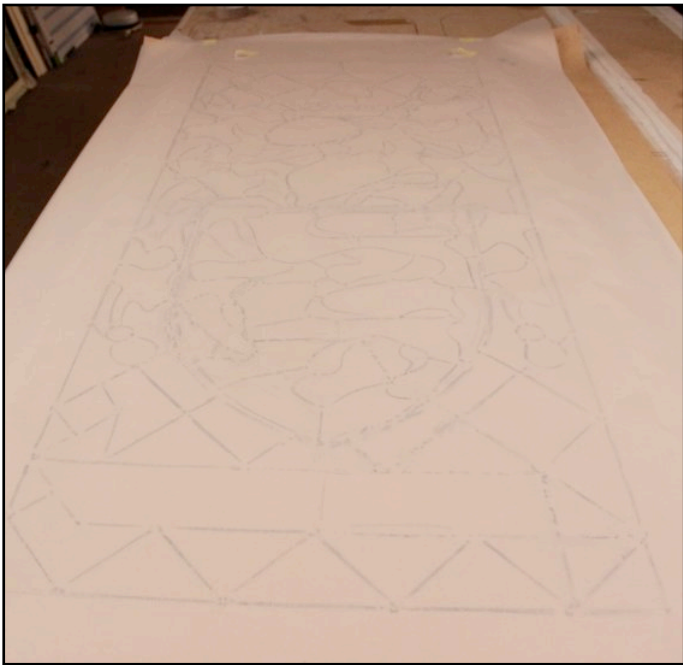


USE A PENCIL TO MARK THE CENTRE OF ALL THE LEADS.

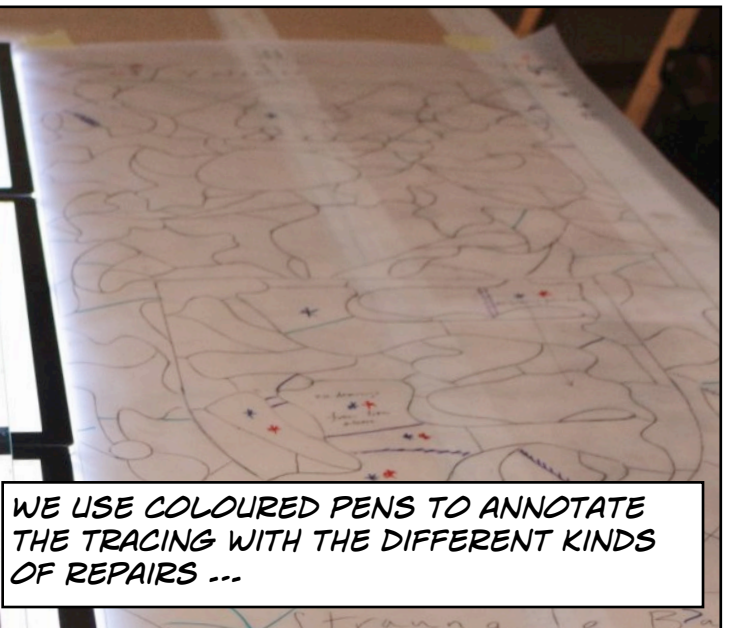

NEXT, WE EXAMINE THE STAINED GLASS.

WE USE COLOURED PENS TO ANNOTATE THE TRACING WITH THE DIFFERENT KINDS OF REPAIRS ...

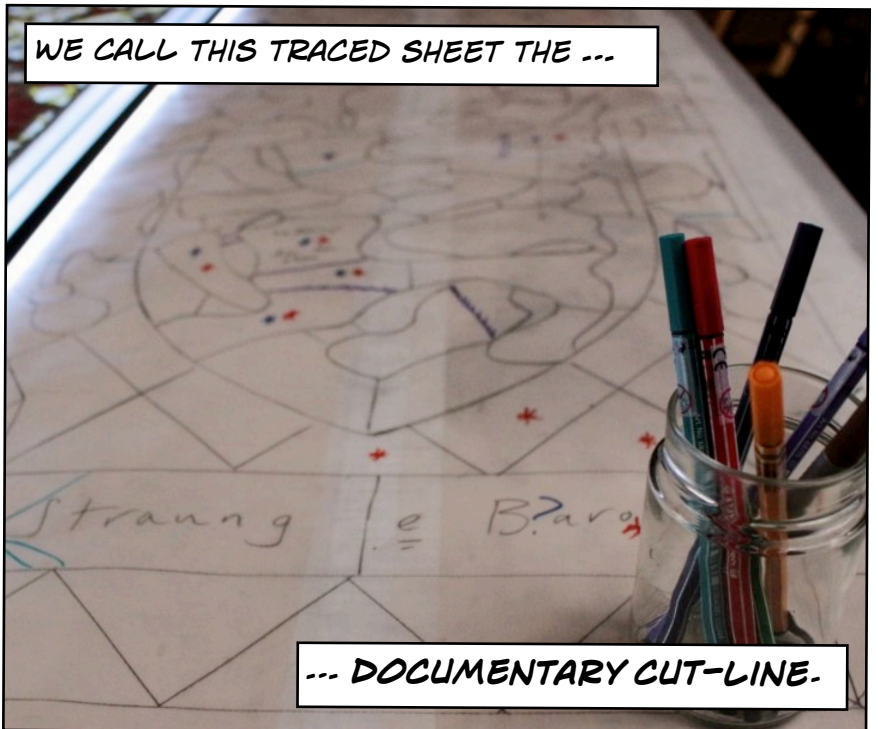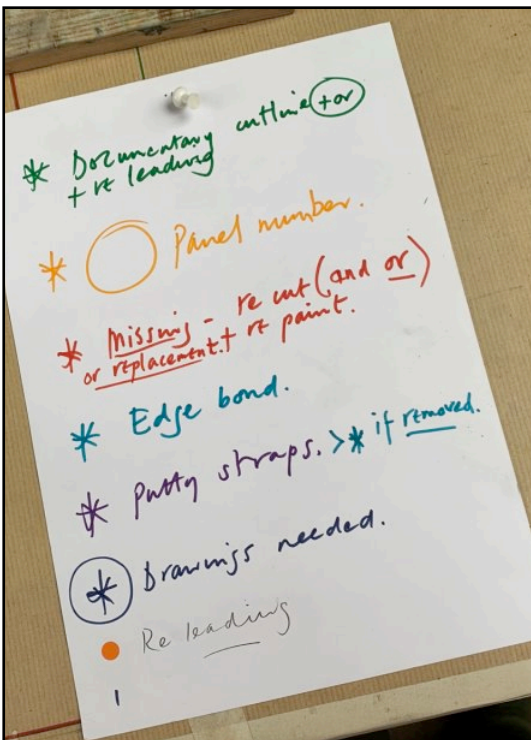

WE CALL THIS TRACED SHEET THE ...

... DOCUMENTARY CUT-LINE.

**STRIP THE WINDOW
WHERE NECESSARY.**



**CLEAN EACH PIECE
OF GLASS.**




**PUT EACH STRIPPED
PIECE IN ITS PROPER
PLACE ON THE
RUBBING.**





IN THIS CASE, ONLY THE BOTTOM-HALF NEEDS TO BE STRIPPED AND RE-LEADED.

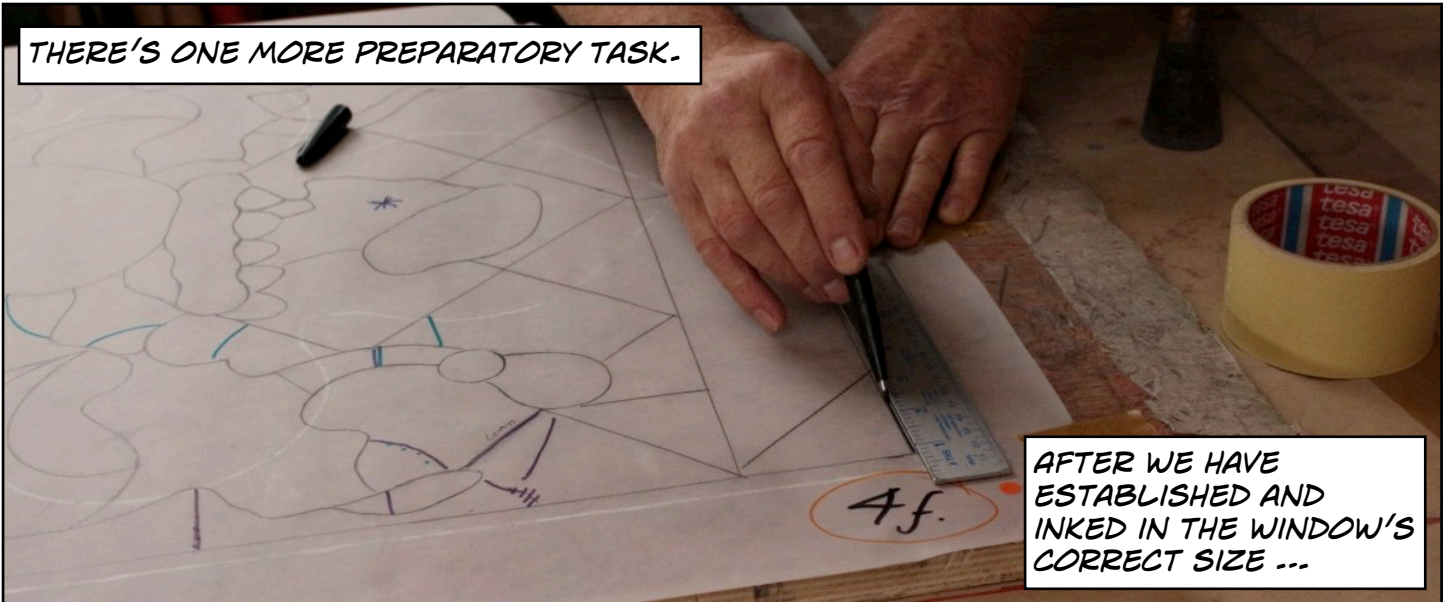

THERE'S ONE MORE PREPARATORY TASK.

AFTER WE HAVE ESTABLISHED AND INKED IN THE WINDOW'S CORRECT SIZE ...



... WE USE THE BITS OF STRIPPED GLASS TO INK IN WHERE THE HEARTS OF ALL THE LEADS WILL GO.

YOU MIGHT NEED TO ADJUST THE PENCIL LINE YOU MADE EARLIER ...

... BECAUSE SOMETIMES THE ORIGINAL GLASS ...

... WILL POSE A CHALLENGE ...

... TO THE RE-LEADING. THIS IS ONE REASON WHY YOU DO THIS TASK NOW: TO IDENTIFY PROBLEMS AND TO MAKE A ADJUSTMENTS FOR LATER ON.


WE ONLY INK IN ...



... THE BOTTOM-HALF ...



... BECAUSE ONLY THE BOTTOM-HALF ...

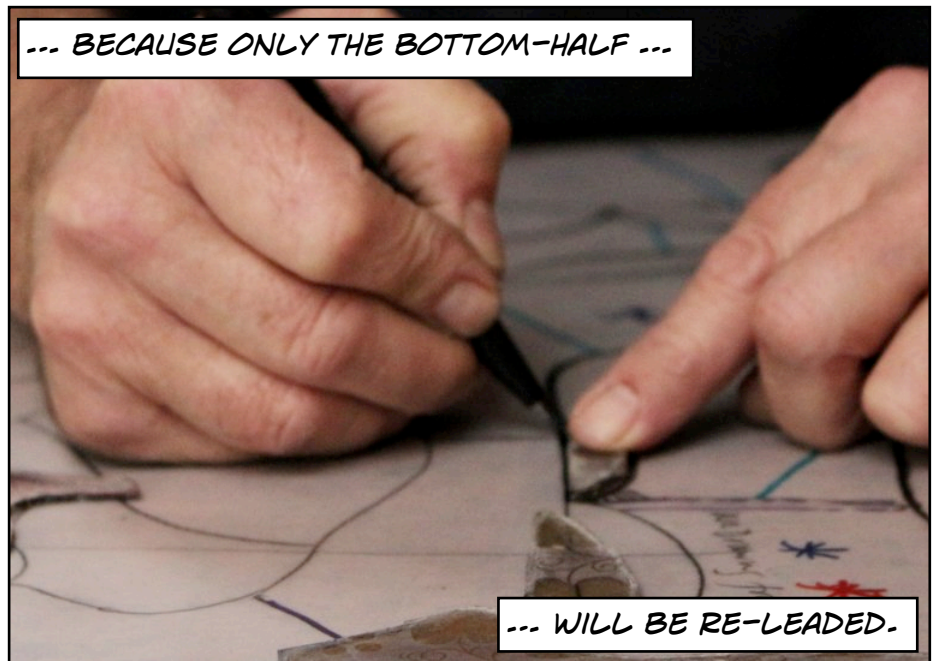

... WILL BE RE-LEADED.

**READY TO START WORK ... GLUEING, CUTTING,
PAINTING ETC. ETC.**



THE CLIENT'S PAPERWORK ...



**... LEAD-LINE RUBBING ON BROWN PAPER AND DOCUMENTARY CUT-LINE ON
TRACING PAPER: SAFE AND EFFECTIVE. UNLIKE A 20,000-WORD REPORT IN
MICROSOFT WORD, THIS PAPERWORK WILL SURVIVE AN E.M.P. ATTACK.**